

## Satellite Up/Dn Converter



Frequency: L/S/C/X/Ku/Ka/Q/V-Band  
Up and Down Converter  
Control Interface:USB and Ethernet